

Setting Up a BCM for Remote Access

- 1 – The BCM must be connected to a port on your LAN and be assigned a local IP address.
- 2 – In the onsite LAN router forward ports 22 and 5989 to the BCM's IP address.
- 3 – Record the BCM's system ID.
- 4 – Record the router's public IP address. You can get this by opening a browser on any PC on the LAN, go to Google and type in "what is my IP".
- 5 – Verify that the time and date are set correctly in the BCM.